

## For PIN Pads

Dejavoo will need to set up the RKL request in the system and invoice for it.

Email both the Pin Pads Serial # and the Encryption Key to your **Dejavoo sales executive**

### From terminal idle screen "WELCOME"

1. Press the Red X key and enter password 3586.
2. Press the green OK key to access the application Core Menu, password 1234.
3. Select Applications.
4. Select Pinpad.
5. Select Settings. Password 3586.
6. Select Security.
7. Select Inject Keys.
8. Select Remote Injection.

### Select Certificate Management

1. Select RKL. Register (Application will display "Terminal Signing: generate Signing CSR" for about 18 seconds while it creates the certificate) Application will display "Terminal Signing: generate Encryption CSR" for about 8 seconds.  
*If device says Certificate Already exists, you should be able to skip to next section DOWNLOAD DEBIT KEYS.*
2. This will be followed by a login prompt (you will receive login 1 and login 2 credentials from your Dejavoo account executive via email) Terminal will display "Terminal Signing: Loaded" after the terminal has successfully created a certificate.

### To download Debit Keys

1. Terminal will be in Certificate Management menu. Press yellow key to navigate 1 menu back.
2. Select RKL Load Keys.
3. When the terminal is completed it will display "Key Loading Succeeded".

**Note:** Prior to "Download Debit Keys" you may need to go SETUP REMOTE LOAD,  
Then SELECT DEVICE Group Name and choose the key you are trying to encrypt.