

## UNIVERSAL TERMINAL FEATURES (CORE MENU)



The following section provides feature explanations and steps for global terminal settings. Due to the secure multiple application capabilities of the Dejavoo product each host application functions independently, it is for this reason that the Core System Menu is where you will find features that share information of all applications combined.

The Global Terminal features outlined in this section are as follows:

- |                          |                    |                      |
|--------------------------|--------------------|----------------------|
| ■ Date & Time            | ■ Display Contrast | ■ Backlight Settings |
| ■ Keyboard Beep          | ■ Printer Contrast | ■ Security Settings  |
| ■ Communication Settings | ■ Global Reports   | ■ Global Settlement  |
| ■ Loyalty                | ■ Training Mode    |                      |



■ **Download Software:** For assistance with this menu option please contact your Help Desk or Merchant Services provider.

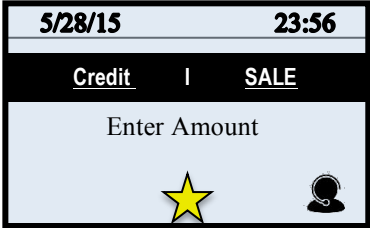
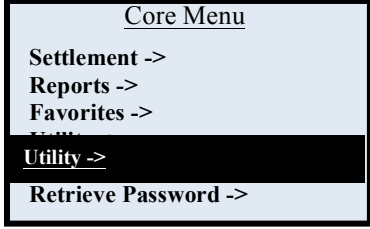
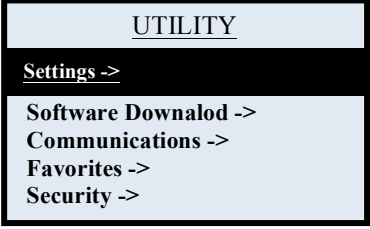
### EDIT THE DATE & TIME



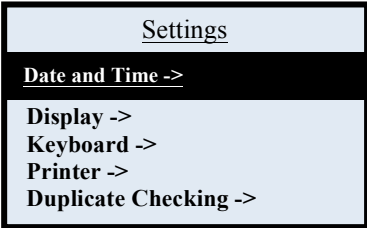
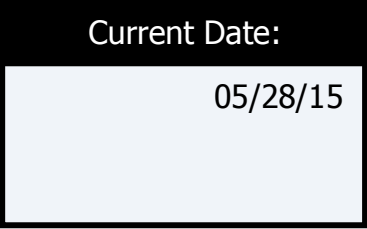
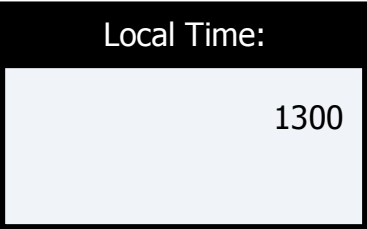

Use the steps below to edit the Date & Time in your Dejavoo terminal. It is important to note that when a Dejavoo terminal is powered on it will prompt you to confirm the date and time is correct, when this happens you can press F2 to confirm it is correct or press F4 if it is incorrect and follow the terminal prompts to update to the correct date and time. The time in the terminal must always be entered in 24 hour clock (military) format.



Date is in MM (2 digit month) DD (2 digit day) YY (2 digit year) and Time is in Military format HH (2 digit hour) MM (2 digit minute) SS (2 digit second) both entries done without spaces.

Step	Action	Display				
1.	From the idle prompt press the OK key to access the Core Menu.					
2.	<table border="0" style="width: 100%;"> <tr> <th style="width: 50%; text-align: left;">NON TOUCH SCREEN</th> <th style="width: 50%; text-align: left;">TOUCH SCREEN</th> </tr> <tr> <td>Using the down arrow key highlight the word UTILITY and press OK <i>* If prompted input password, default is 1234</i></td> <td>Using your fingertip TAP the word UTILITY <i>* If prompted input password, default is 1234</i></td> </tr> </table>	NON TOUCH SCREEN	TOUCH SCREEN	Using the down arrow key highlight the word UTILITY and press OK <i>* If prompted input password, default is 1234</i>	Using your fingertip TAP the word UTILITY <i>* If prompted input password, default is 1234</i>	
NON TOUCH SCREEN	TOUCH SCREEN					
Using the down arrow key highlight the word UTILITY and press OK <i>* If prompted input password, default is 1234</i>	Using your fingertip TAP the word UTILITY <i>* If prompted input password, default is 1234</i>					
3.	<table border="0" style="width: 100%;"> <tr> <th style="width: 50%; text-align: left;">NON TOUCH SCREEN</th> <th style="width: 50%; text-align: left;">TOUCH SCREEN</th> </tr> <tr> <td>Using the down arrow key highlight the word SETTINGS and press OK</td> <td>Using your fingertip TAP the word SETTINGS</td> </tr> </table>	NON TOUCH SCREEN	TOUCH SCREEN	Using the down arrow key highlight the word SETTINGS and press OK	Using your fingertip TAP the word SETTINGS	
NON TOUCH SCREEN	TOUCH SCREEN					
Using the down arrow key highlight the word SETTINGS and press OK	Using your fingertip TAP the word SETTINGS					

## EDIT THE DATE & TIME, CONTINUED

Step	Action		Display
	NON TOUCH SCREEN	TOUCH SCREEN	
5.	Using the down arrow key highlight the words DATE AND TIME and press OK	Using your fingertip TAP the words DATE AND TIME	 <p>Settings Date and Time -&gt; Display -&gt; Keyboard -&gt; Printer -&gt; Duplicate Checking -&gt;</p>
6.	If the date displayed is correct press OK  if the date displayed is incorrect press the Yellow back space key to clear it then input the correct Date using the following format: MM/DD/YY		 <p>Current Date: 05/28/15</p>
7.	If the time displayed is correct press OK  if the time displayed is incorrect press the Yellow back space key to clear it then input the correct time using 24 hour clock (military) format. *example shows 1:00 PM		 <p>Local Time: 1300</p>
8.	Terminal returns to the Settings main menu. 		

## MILITARY TIME CONVERSION CHART

Regular Time	Military Time	Regular Time	Military Time
Midnight	0000	Noon	1200
1:00 a.m.	0100	1:00 p.m.	1300
2:00 a.m.	0200	2:00 p.m.	1400
3:00 a.m.	0300	3:00 p.m.	1500
4:00 a.m.	0400	4:00 p.m.	1600
5:00 a.m.	0500	5:00 p.m.	1700
6:00 a.m.	0600	6:00 p.m.	1800
7:00 a.m.	0700	7:00 p.m.	1900
8:00 a.m.	0800	8:00 p.m.	2000
9:00 a.m.	0900	9:00 p.m.	2100
10:00 a.m.	1000	10:00 p.m.	2200
11:00 a.m.	1100	11:00 p.m.	2300